


SHARP

ENGLISH
GB 1-GB 35

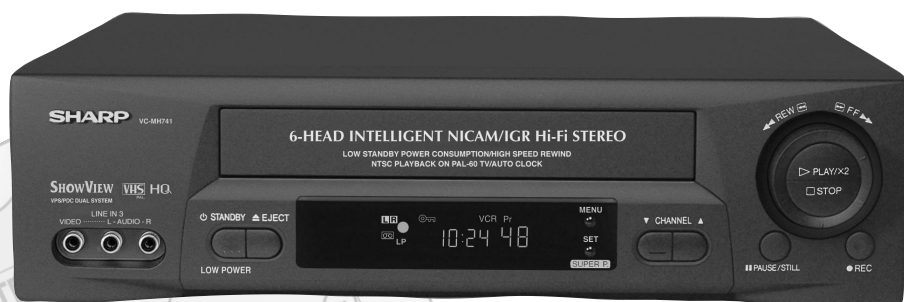

VC-MH741SM

GB VIDEO CASSETTE RECORDER

OPERATION MANUAL

VHS
PAL

SHOWVIEW

- SHARP SUPER PICTURE
- 4 HEAD LONG PLAY
- AUTO CLOCK
- AUTO TUNING

(GB) Dear SHARP customer Thank you for buying this SHARP VCR. Given proper care it will provide years of entertainment for the whole family. Please read this operation manual carefully before attempting to operate the VCR.

Copyright

- Audio-visual material may consist of copyrighted works which must not be recorded without the authority of the owner of the copyright. Please refer to the relevant laws in your Country.
- No part of this publication may be reproduced, stored or transmitted in any form without prior permission from SHARP Electronics (UK) Ltd.

SHOWVIEW® is a registered trademark of Gemstar Development Corporation.

The **SHOWVIEW** system is manufactured under licence from Gemstar Development Corporation.

THIS MANUAL COVERS A RANGE OF MODELS. ALL OF THE FEATURES MENTIONED MAY NOT NECESSARILY APPLY TO YOUR VCR.

(E) Estimado Cliente SHARP Gracias por adquirir este VCR de SHARP. Si lo cuida correctamente, disfrutará durante años de sus características. Lea atentamente este manual de funcionamiento antes de utilizar el VCR.

Copyright

- Los materiales audiovisuales pueden componerse de obras que cuenten con copyright, que no deben grabarse sin la autorización del propietario del copyright. Consulte las leyes correspondientes de su país.
- Ninguna sección de este publicación podrá reproducirse, almacenarse ni transmitirse en forma alguna sin la previa autorización de SHARP ELECTRONICS (EUROPE) GmbH.

SHOWVIEW® es una marca registrada de Gemstar Development Corporation.

El sistema **SHOWVIEW** está fabricado bajo licencia de Gemstar Development Corporation.

ESTE MANUAL CUBRE VARIOS MODELOS.

TODAS LAS CARACTERÍSTICAS MENCIONADAS PUEDEN NO NECESARIAMENTE APLICARSE A SU VCR.

(P) Caro Cliente da SHARP

Obrigado por der adquirido este VÍDEOGRAVADOR SHARP.

Se o utilizar correctamente, proporcionará vários anos de diversão a toda a família. Leia cuidadosamente este manual de instruções antes de utilizar o vídeogravador.

Direitos de autor

- O material audiovisual pode ser composto por trabalhos protegidos pelos direitos de autor, que não podem ser gravados sem a autorização do proprietário dos direitos de autor. Consulte as leis nacionais relecionadas com este assunto.
- Nenhuma parte desta publicação pode ser reproduzida, armazenada ou transmitida sob qualquer forma sem permissão prévia da SHARP ELECTRONICS (EUROPA) GmbH.

SHOWVIEW® é uma marca registrada da Gemstar Development Corporation.

O Sistema **SHOWVIEW** é produzido sob licenciamento da Gemstar Development Corporation.

ESTE MANUAL ABRANGE UMA GAMA DE MODELOS.

TODAS AS FUNÇÕES MENCIONADAS PODEM NAO NECESSARIAMENTE APLICAR-SE AO SEU.

(S) Bästa SHARP-kund Vi tackar dig för ditt köp av en Videobandspelare från SHARP. Om du sköter videobandspelaren på rätt sätt kommer den att skänka dig och hela din familj mycket nöje under lång tid framöver. Studera denna bruksanvisning noggrant innan du använder videobandspelaren.

Copyright


- Audiovisuella material och produkter kan lyda under upphovsrättslagen och får då inte spelas in utan tillstånd från upphovsrättsinnehavaren. Kontrollera vilka lagar som gäller i ditt land.
- Denna skrift får inte toll någon del reproduceras, lagras eller spridas i någon form utan tillstånd från SHARP ELECTRONICS (EUROPE) GmbH.

SHOWVIEW® är ett registrerat varumärke tillhörande Gemstar Development.


Systemet **SHOWVIEW** tillverkas på licens från Gemstar Development Corporation.

DENNA BRUKSANVISNING GÄLLER FÖR FLERA OLIKA MODELLER.

OBSERVERA ATT ALLA FUNKTIONER OCH EGENSKAPER SOM BEHANDLAS I TEXTEN KANSKE INTE AVSER JUST DIN MODELL.

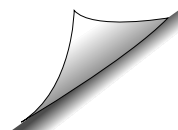


VCR REMOTE CONTROL

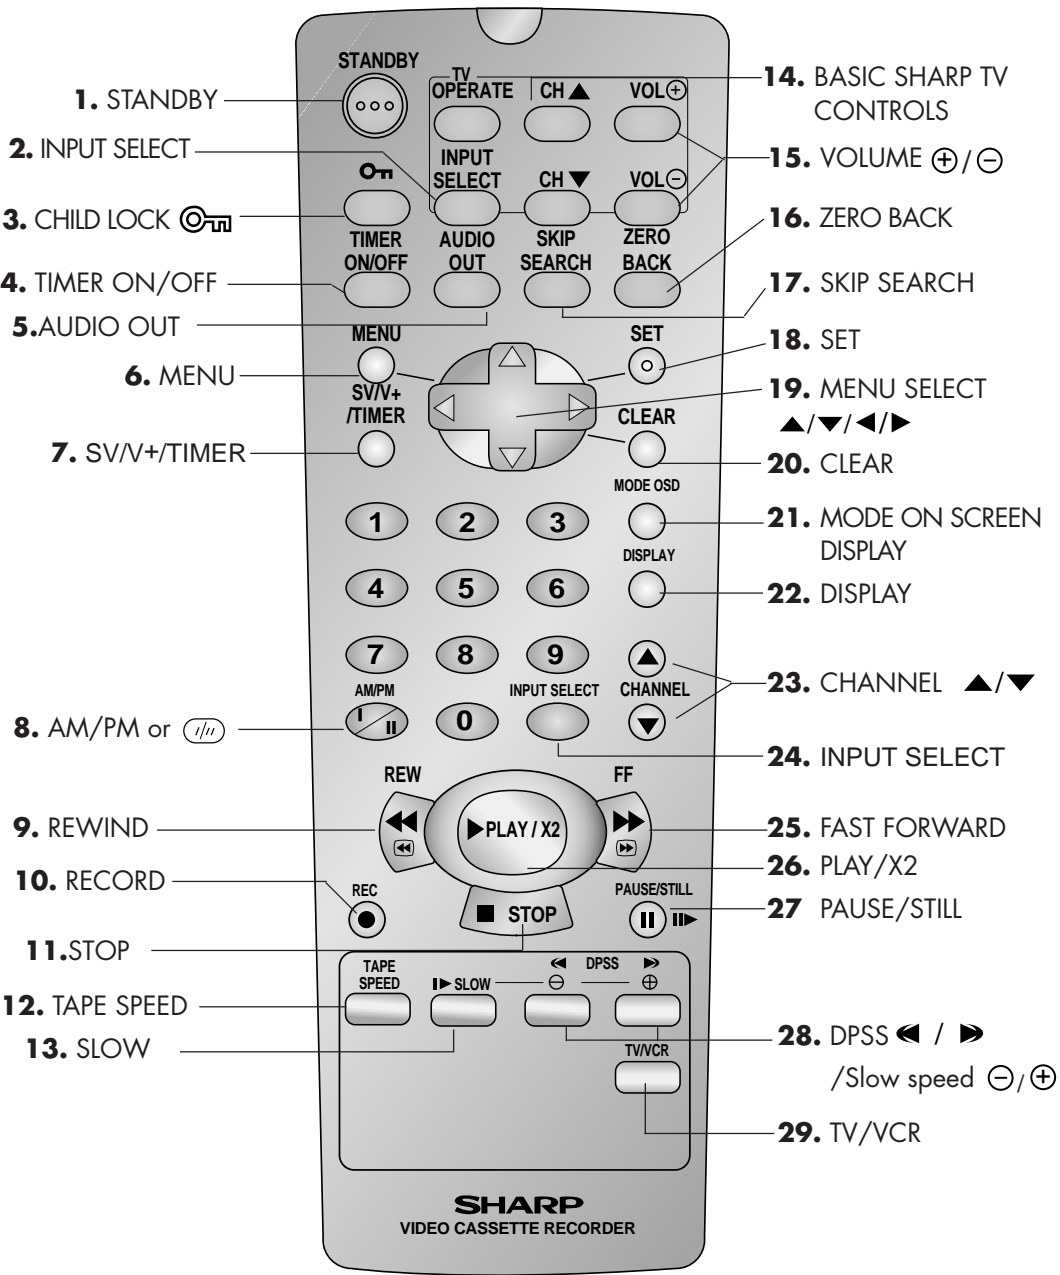

VCR FRONT PANEL/REMOTE CONTROL EQUIVALENT FUNCTIONS.

If you prefer, or if remote control batteries fail, you will need to use the VCR front panel controls. The only differences in function are shown below:

FUNCTION OSD	OPERATION WITH REMOTE CONTROL	OPERATION WITH VCR FRONT PANEL
Moving UP/DOWN menu Moving LEFT/RIGHT menu	[$\blacktriangle/\blacktriangledown$] buttons [$\blacktriangleleft/\blacktriangleright$] buttons	CHANNEL $\blacktriangle/\blacktriangledown$ buttons. Turn shuttle ring RIGHT/LEFT

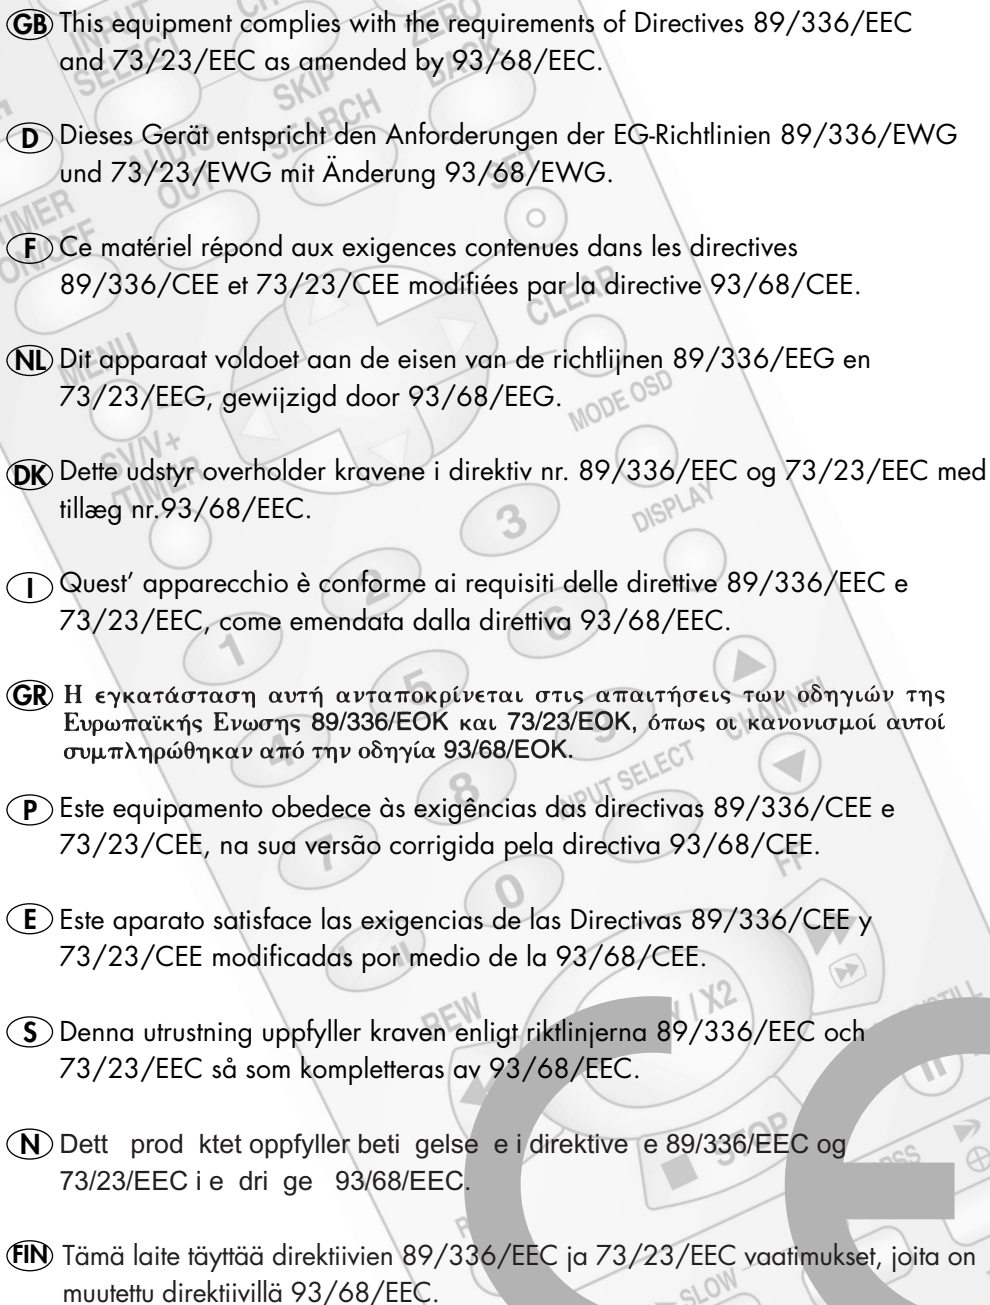- 
- GB** This equipment complies with the requirements of Directives 89/336/EEC and 73/23/EEC as amended by 93/68/EEC.
- D** Dieses Gerät entspricht den Anforderungen der EG-Richtlinien 89/336/EWG und 73/23/EWG mit Änderung 93/68/EWG.
- F** Ce matériel répond aux exigences contenues dans les directives 89/336/CEE et 73/23/CEE modifiées par la directive 93/68/CEE.
- NL** Dit apparaat voldoet aan de eisen van de richtlijnen 89/336/EEG en 73/23/EEG, gewijzigd door 93/68/EEG.
- DK** Dette udstyr overholder kravene i direktiv nr. 89/336/EEC og 73/23/EEC med tillæg nr. 93/68/EEC.
- I** Quest' apparecchio è conforme ai requisiti delle direttive 89/336/EEC e 73/23/EEC, come emendata dalla direttiva 93/68/EEC.
- GR** Η εγκατάσταση αυτή ανταποκρίνεται στις απαιτήσεις των οδηγιών της Ευρωπαϊκής Ένωσης 89/336/EOK και 73/23/EOK, όπως οι κανονισμοί αυτοί συμπληρώθηκαν από την οδηγία 93/68/EOK.
- P** Este equipamento obedece às exigências das directivas 89/336/CEE e 73/23/CEE, na sua versão corrigida pela directiva 93/68/CEE.
- E** Este aparato satisface las exigencias de las Directivas 89/336/CEE y 73/23/CEE modificadas por medio de la 93/68/CEE.
- S** Denna utrustning uppfyller kraven enligt riktlinjerna 89/336/EEC och 73/23/EEC så som kompletteras av 93/68/EEC.
- N** Dett prod ktet oppfyller beti gelse e i direktive e 89/336/EEC og 73/23/EEC i e dri ge 93/68/EEC.
- FIN** Tämä laite täyttää direktiivien 89/336/EEC ja 73/23/EEC vaatimukset, joita on muutettu direktiivillä 93/68/EEC.

CONTENTS

BEFORE USING YOUR VCR

Important notes on your VCR	2
Unpacking the accessories	3

INSTALLING YOUR VCR

Connecting the cables	4
Tuning the TV into the VCR	5
Auto installation	6

BASIC OPERATION

Important notes on your VCR and video tapes	7
How to playback a video tape	7
Pausing and slow motion	8
Fast forwarding/rewinding a video tape	9
Immediate recording	10
How to use SHOWVIEW to make a recording	11
How to set a delayed recording	13
Checking, changing and cancelling a recording	15

ADVANCED OPERATION

Audio and your VCR (HiFi VCR'S ONLY)	16
Connecting to audio equipment	17
Playback of a video tape	18
Checking the amount of tape remaining	18
Playing back a video tape repeatedly	18
Playing back an NTSC tape	19
Digital Display	20
Blue mute	21
Colour	21
Searching the video tape	22
Skip searching the video tape	22
Digital programme search system (DPSS)	22
Recording from other equipment	23
Decoder switching operation	24

SPECIAL FEATURES ON YOUR VCR

Low power feature	25
Child lock	25

CUSTOMISED INSTALLATION

Manually tuning a channel	26
Broadcast and CATV channels	27
Manually sorting channels	28
Sorting the channels into your preferred order	28
Deleting channels	29
Re-naming channels	30
Changing the on-screen display language	31
Manually setting the clock	31

MORE INFORMATION ABOUT YOUR VCR

VCR digital display	32
Selecting the output from the VCR	32
On-screen display	33
Specifications	34
Troubleshooting	35


BEFORE USING YOUR VCR

IMPORTANT NOTES ON YOUR VCR

IDEAL VCR LOCATION


PLACE THE VCR..

- ... on a flat level surface away from radiators or other heat sources and out of direct sunlight.
- ... and video tapes away from magnetic sources such as speakers or microwave ovens.
- ... at least 8" (20cm) away from the TV.
- ... away from curtains, carpets or other materials and allow ventilation space around the VCR.

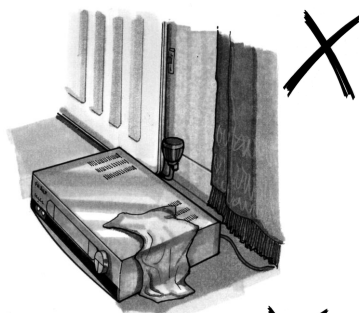

DO NOT...

- ... block the air-vent openings.
- ... expose the VCR to excessive dust, mechanical vibration or shock.
- ... place any heavy object or liquid on top of the VCR. If liquid drops inside the VCR unplug immediately and contact your SHARP dealer. Do not use the VCR.
- ... insert or drop anything into the tape compartment or through the air-vents, as this could result in serious damage, fire or an electric shock.


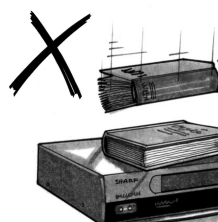


POWER SOCKETS

- To avoid overheating or even fire, insert the plug correctly into the socket.

DO NOT...

- ... overload power sockets, this may cause a fire or electric shock.
- ... pull the power cord to disconnect the plug from the mains.
- ... bind the power cords together.
- This VCR is not equipped with a mains power switch. Accordingly, nominal current to drive the clock is drawn at all times when the AC power cord is plugged into a wall socket. If the VCR is not to be used for an extended period be sure to unplug the cord.

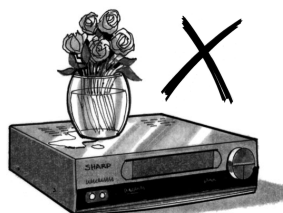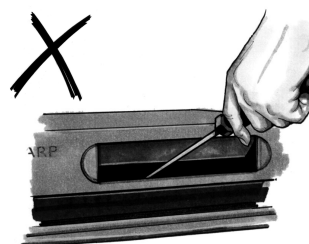

BEFORE USING YOUR VCR

UNPACKING THE ACCESSORIES


CHECK ALL THESE ACCESSORIES ARE SUPPLIED WITH YOUR VCR. CONTACT YOUR DEALER IF ANY ARE MISSING.



(TYPE AA/R6/UM3)
BATTERIES (X2)
for the remote control unit.



RF CONNECTION
CABLE connects the VCR to
the TV.

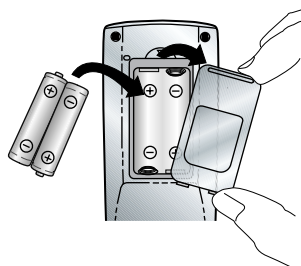

TO FIT THE BATTERIES INTO THE REMOTE CONTROL

Remove the battery cover on the back of the remote control.
Fit the batteries: \ominus to \ominus and \oplus to \oplus . terminals. Place the battery cover back into position.

Battery cover




Remote Control

- Remote Control must be pointed towards the VCR to operate.
- Do not expose to liquid or shock.
- May not function if the VCR is in direct sunlight or any other strong light.
- Replace both alkaline batteries (type AA/R6/UM3) if the remote control fails.
- Remove the batteries and keep in a safe place if you do not plan to use the VCR for several months.
- Remove and dispose of flat batteries safely and promptly.
- Incorrect use of batteries may cause them to leak or burst.

INSTALLING YOUR VCR

CONNECTING THE CABLES

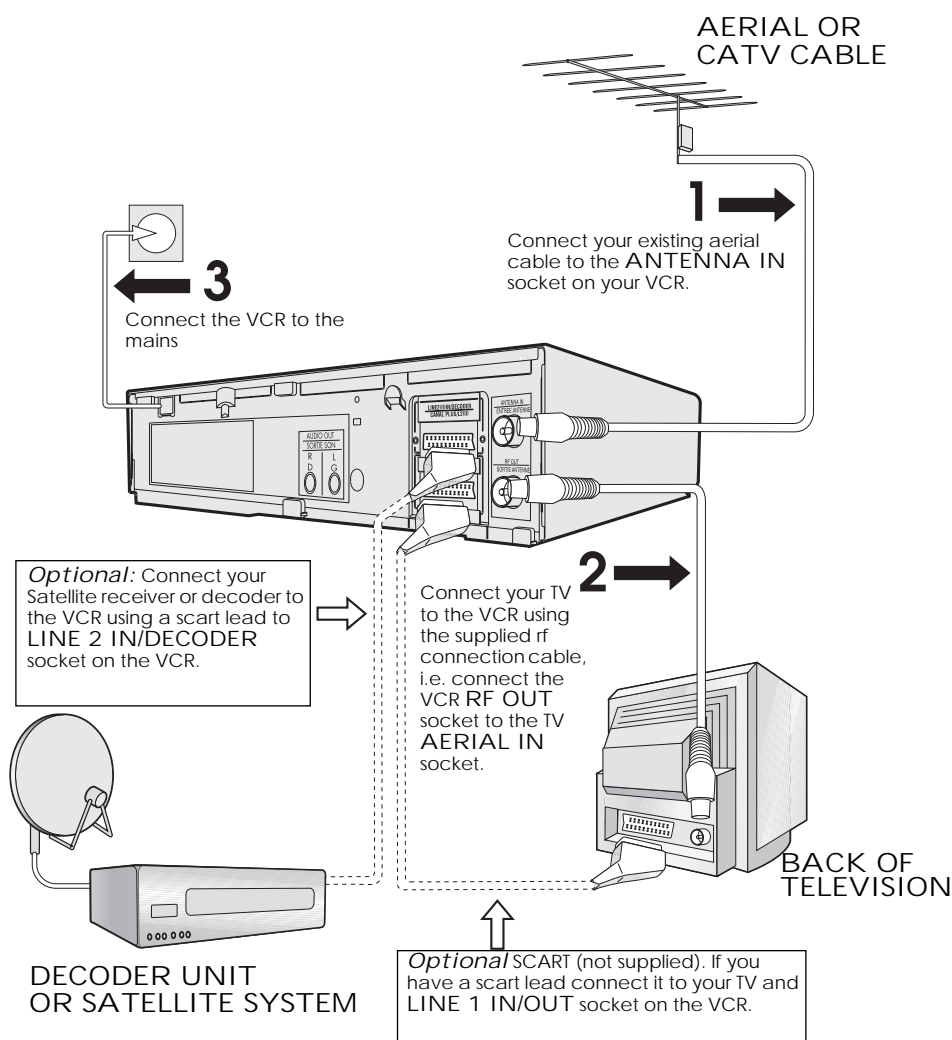

✓ *The VCR is correctly connected.*

INSTALLING YOUR VCR

TUNING THE TV INTO THE VCR


IMPORTANT NOTE: By pressing the **STANDBY** button, the VCR will toggle between **STANDBY** and **LOW POWER** modes. The VCR display will not be illuminated in low power mode.

1. Ensure your VCR is still in the **STANDBY** mode (not low power).
2. Switch on the TV. Select an unused channel on your TV for your VCR (there may be a dedicated video channel refer to your TV operation manual).
3. Press and hold the **MENU** button for 3 seconds. The VCR will search and display the ideal RF channel.
4. Tune the selected channel on your TV (refer to your TV manual) until the menu screen appears.
5. Press **SET** to store the RF channel and to place the VCR back into **STANDBY**.



SHARP

Example:



CH 36 RF

MENU SCREEN



TIMER
MODE
GRUNDE INSTELLUNG

▲ ▼ : WÄHLEN
SET : EINGABE MENU : ENDE

NOTE:

- If you have a preferred channel, the RF channel can be set manually (21-69) after Step 3 using [▲ / ▼] keys.

✓ *The TV is tuned to the VCR.*

INSTALLING YOUR VCR

AUTO INSTALLATION

Press **STOP** to switch on your VCR.

This model will automatically tune in the TV channels in your area, sort them into a standard order and set the clock.

The screen opposite should be showing on your TV.

Follow the instructions from the screens.

(Auto sort will take a few minutes to complete)

On completion, the **MOVE MENU** will appear showing the present channel order. Press **MENU** to exit.

AUTO INSTALLATION
PRESS SET KEY TO START
AUTOMATISCHE EINSTELLUNG
ZUM BEGINN, DIE SET-TASTE
DRÜCKEN.
SET : EINGABE MENU : ENDE

If the clock is **NOT** automatically set, the clock screen will appear., refer to **MANUALLY SETTING THE CLOCK**. To check the clock has been set correctly, press **DISPLAY** until the time appears on the display.

- If the screen above does not appear, follow the procedure **VCR RESET** below.

If you wish to customise the channel order refer to **MANUALLY SORTING CHANNELS**.

VCR RESET

1. Press **STOP** to switch on the VCR.
2. Press and hold **MENU** and **CHANNEL** ▼ buttons together on the front of the VCR for 10 seconds.
3. The **AUTO INSTALLATION** screen should now be showing on your TV.
4. Follow the on-screen display to proceed with auto installation.

Refer to the **CUSTOMISED INSTALLATION** chapter if


- Your VCR could not tune automatically - due to for example poor reception.
- You wish to re-arrange the channel order.
- You wish to change the time on the clock or if the VCR could not set the time.

✓ *All the programmes should now be correctly tuned in and the clock set.*

BASIC OPERATION

IMPORTANT NOTES ON YOUR VCR AND VIDEO TAPES

VIDEO TAPES

- If you use only good quality video tapes, generally it will not be necessary to clean the video heads.
- If poor quality tapes are used, or if a tape is loaded after changing VCR location, oxide from the tape may "clog" the video heads. This will cause the playback picture to be "snowy", or even disappear.
- To remove minor contamination run a video tape in visual search mode. If this fails, you will need to have the heads cleaned by a SHARP Service Facility. Please note, if cleaning is necessary it is not covered by the guarantee.
- Use video tapes which carry the  mark.

HOW TO PLAYBACK A VIDEO TAPE



BEFORE YOU PLAYBACK A VIDEO TAPE


Condensation forms in the VCR when it is moved out of or into a warm place. If you try to playback or record, the video tape and VCR may be damaged. Turn the VCR on and wait for about two hours until the VCR reaches room temperature before operating.

PLAYBACK

1. Switch on your TV and select the video channel.
2. Carefully push a pre-recorded video tape into the tape compartment. This will switch the VCR on.

- If the record-protection tab has been removed, the VCR will start playback as soon as the video tape has been loaded.

3. To start playback, press **PLAY/X2** (▶).

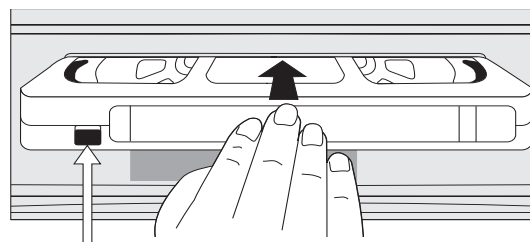

Record protection tab

BASIC OPERATION

HOW TO PLAYBACK A VIDEO TAPE

SHARP SUPER PICTURE should enhance the picture quality during playback. It is normally set to ON. To turn SHARP SUPER PICTURE on or off press SUPER P. on the VCR front panel.

- For double speed playback (without sound), press PLAY/X2 (▶) again.
- To revert to normal playback, press PLAY/X2 (▶) again.
- To stop the video tape, press STOP (■).
- To eject the tape press ▲ EJECT on the VCR.

PICTURE DISTURBANCE DURING PLAYBACK

This VCR has an automatic tracking system which reduces picture disturbance when you start to playback a video tape. When auto-tracking is in operation ✨ flashes on the on-screen display. If the picture still has disturbance you may need to manually track the video tape:

During PLAYBACK of a video tape.

- Press CHANNEL ▲ or ▼ to position picture interference off the TV screen. (Manual Tracking)
- Press CHANNEL ▲ and ▼ buttons together to start Auto Tracking.

PAUSING AND SLOW MOTION


1. Press PLAY/X2 (▶) to start the video tape playing.
2. To pause the video tape, press PAUSE/STILL (||).
 - To minimise jitter whilst in pause mode press CHANNEL ▲ or ▼.
 - Press PLAY/X2 (▶) to resume playback.
3. To playback in slow motion (without sound) press ► SLOW on the remote control. Slow motion speed can be adjusted using the ⊖ or ⊕ buttons next to the slow button. Picture disturbance can be improved by using the CHANNEL ▲ or ▼ during slow motion playback.
 - Press PLAY/X2 (▶) to resume playback.

NOTES:

- There will be picture interference and possibly a change to black and white picture using Pause and Slow functions.
- PAUSE mode will disengage after about 5 minutes.

BASIC OPERATION

HOW TO PLAYBACK A VIDEO TAPE

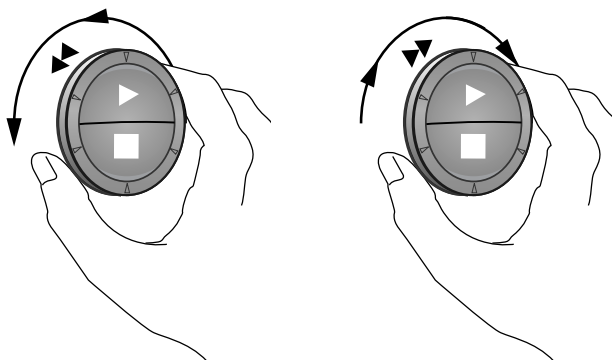

FAST FORWARD/REWINDING A VIDEO TAPE

1. Press STOP (■) to stop the video tape.
2. Press FAST FORWARD (▶▶)/REWIND (◀◀) on the remote control **or** turn the shuttle ring on the VCR to the **Right/Left** and release.
3. To stop fast forward/rewind, press STOP (■).

FORWARD/REVERSE VISUAL SEARCH

1. During playback, press FAST FORWARD (▶▶)/REWIND (◀◀) on the remote control, **or** turn the shuttle ring fully to the **Right/Left**.
2. To lock search mode turn the shuttle far **Right/Left** and release.
3. To decrease the speed, press FAST FORWARD (▶▶)/REWIND (◀◀) again, or turn the shuttle to the halfway position.
4. Press PLAY/X2 (▶) to resume playback.

NOTE:

- There will be picture interference and possibly a change to black and white picture using Visual Fast Forward/Rewind functions.

BASIC OPERATION

IMMEDIATE RECORDING

SELECTION OF A CHANNEL

Select the channel by using the number buttons on the remote control, or select the next/previous channel by pressing CHANNEL [▲ or ▼].

To change between single digit and 2-digit channel numbers, press AM/PM (1/11).

For example, for channel 24, press AM/PM (1/11) then press 2 4.

You can record the channel you are watching or a different channel.

1. Insert a video tape into your VCR.
2. Select the channel you wish to record on the VCR.
3. To start recording, press REC (●).
4. To pause during recording, press PAUSE/STILL (||).
5. To continue recording, press REC (●).
6. To stop recording, press STOP (■) once.

SIMPLE TIMED RECORDING:

1. To specify a stop time, press REC (●).
2. Each additional press of REC (●) will delay the stop time by 10 minutes.
3. To stop recording at any time, press STOP (■) once.




STOP 15:30

NOTES:

- If the tape ends before the recording is complete the VCR will stop recording and rewind, or eject if the VCR is in timer record mode.
- If the VCR ejects the video tape when you press REC (●) the tape is record protected. i.e. record protection tab has been removed.

BASIC OPERATION

HOW TO USE **SHOWVIEW** TO MAKE A RECORDING

- If  appears on the VCR display, press **TIMER ON/OFF** before starting.
- Check that the clock is displaying the correct time.





SHOWVIEW allows you to program the VCR to record up to eight programmes using the SHOWVIEW numbers published in TV listings...

1. Press [SV/V+] on the remote control
2. Enter the SHOWVIEW number from the TV listing using the **NUMBER BUTTONS**.

→ **SHOWVIEW NO.** -
ONCE **WEEKLY** **DAILY**

NOTE:

- An **ERROR** message will appear if you have entered a number that is not a current SHOWVIEW number. If this happens press **CLEAR** to delete the numbers as required and enter the correct SHOWVIEW number

3. Press [ / ] to select **ONCE**, **WEEKLY**, **DAILY**
4. If you want to make additional recordings at the same time each day or week, then use [ / ] to select the **WEEKLY**, or **DAILY** option as appropriate.
5. Press **SET** to confirm..





NOTE:

- Check that the menu list agrees with the times shown in the TV listing. If it does not press **CLEAR** to return to the SHOWVIEW menu, and re-enter the correct SHOWVIEW number

The first time that you use SHOWVIEW to make a recording on each channel Preset, (PR) may be highlighted on the menu.

6. Enter the channel you wish to record using the **NUMBER BUTTONS**, for example if you wish to record channel 2 press **0 2**. The VCR will remember this for the future.

DATE	PR	START	STOP	1 / 2
21 / 06	02	12:00	13:00	SP*
-- / --	--	--:--	--:--	--
-- / --	--	--:--	--:--	--
-- / --	--	--:--	--:--	--

PR	: ZDF		
 	: SELECT	 	: CHANGE
SET	: ENTER	MENU	: EXIT


NOTES:

You may also access the SHOWVIEW menu by the following procedure:

- i. Press **MENU**.
- ii. The **SHOWVIEW** option will be highlighted. Press **SET** to confirm.
Continue from step 2 above.

BASIC OPERATION



HOW TO USE **SHOWVIEW** TO MAKE A RECORDING

7. If your VCR has long play facility and you wish to change the **RECORDING SPEED**, use the [◀/▶] to highlight SP. Press [▲/▼] to select standard play (SP) or long play (LP) as required.
8. [See NOTE below]. For VPS/PDC setting use [◀/▶] to highlight the final column. Using the [▲/▼] will select VPS/PDC ON or OFF (★ = ON - = OFF).
9. Press SET to confirm the programme. The SHOWVIEW menu will reappear. If you wish to enter further SHOWVIEW recordings repeat this procedure.
10. When you have completed entering timer settings, press MENU to remove the menu from the TV screen.
11. Press TIMER ON/OFF once to place the VCR in TIMER STANDBY mode.  will be shown on the display.

					1 / 2
DATE	PR	START	STOP		
21 / 06	02	12 : 00	13 : 00	SP *	
-- / --	--	-- : --	-- : --	--	
-- / --	--	-- : --	-- : --	--	
-- / --	--	-- : --	-- : --	--	
TAP E SPEED : SP / LP					
◀ ▶	: SELECT		▲ ▼	: CHANGE	
SET	: ENTER		MENU	: EXIT	

					1 / 2
DATE	PR	START	STOP		
21 / 06	02	12 : 00	13 : 00	SP -	
-- / --	--	-- : --	-- : --	--	
-- / --	--	-- : --	-- : --	--	
-- / --	--	-- : --	-- : --	--	
VPS / PDC ★ : ON - : OFF					
◀ ▶	: SELECT		▲ ▼	: CHANGE	
SET	: ENTER		MENU	: EXIT	

NOTES:

- VPS/PDC is a signal broadcast by some TV stations which adjusts the start and stop time of your VCR recording. This ensures that if there is a change in broadcast time for your programme the VCR will still record the whole programme. It is essential that the start time as it appears in the TV listing is used to program the VCR, as this information is used to identify the VPS/PDC signal corresponding to your programme.
- If  flashes a video tape has not been inserted into the VCR.
- If the video tape is ejected when the VCR tries to record the record protection tab has been removed.
- During recording, press STOP () to cancel the recording. If there are further recordings to be made, the VCR will return to TIMER STANDBY.


BASIC OPERATION

HOW TO SET A DELAYED RECORDING

You can make a maximum of eight delayed recordings up to a year in advance.







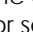


The example shown is for 24-hour clock operation. 12-hour clock operation can be selected from the manual clock setting menu.

12-hour clock am/pm can be selected using the AM/PM  button on the remote control.


- If  appears on the VCR display, press TIMER ON/OFF before starting.
- Check that the clock is displaying the correct time.

SETTING A RECORDING

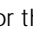For example: Recording a programme on channel 3 from 21:05 to 22:30 on July 9th.

1. Press STOP () to switch on the VCR.
2. Press MENU .
3. Press [ / ] to select TIMER. Press SET to confirm.
4. The position which is initially highlighted is the next available timer record entry. Press SET to confirm this.
 - The display will automatically show today's date.
 - Either:** If this is the date you wish to make the recording on, press SET to confirm this.
 - Or:** enter the recording date using the [ / ] or the NUMBER BUTTONS. Enter two digits for the day, then two for the month. For example for July 9th, press 0 9 (9th), then 0 7 (July).
5. Then press SET to confirm.
6. If you want to make additional recordings at the same time each day or week, use [ / ] or select D (daily) or W (weekly). Then press SET to confirm.
7. Enter the channel using the [ / ] or the NUMBER BUTTONS. For example to record a programme on channel 3, press 0 3. Then press SET to confirm.

MENU SCREEN

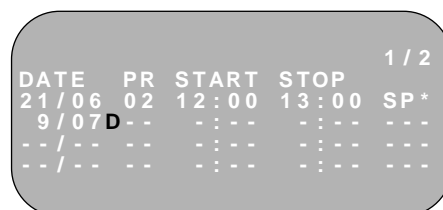

BASIC OPERATION

HOW TO SET A DELAYED RECORDING

8. Enter the start time using the [▲ / ▼] or the **NUMBER BUTTONS** hours first then minutes (when entering less than 10 minutes add a '0' before the number), for example for 21:05 start, press 2 1 0 5. Then press **SET** to confirm.

9. Enter the stop time, for example for 22:30 stop, press 2 2 3 0.


10. If your VCR has long play facility and you wish to change the **RECORDING SPEED**, use the [◀ / ▶] to highlight **SP**. Press [▲ / ▼] to select standard play (SP) or long play (LP) as required.

11. [See note below]. For VPS/PDC setting use the [◀ / ▶] to highlight the final column. Using the [▲ / ▼] will select VPS/PDC ON or OFF (* = ON - = OFF).

12. Press **SET** to confirm.

- The MENU now shows all the timer settings you have entered. If you wish to make additional timer recordings, repeat this procedure.

13. When you have completed entering timer settings, press **MENU** to remove the menu from the TV screen.



14. Press **TIMER ON/OFF** once to place the VCR in **TIMER STAND-BY** mode.  will be shown on the display.

					1 / 2
DATE	PR	START	STOP		
21 / 06	02	12 : 00	13 : 00	SP *	
9 / 07	D03	21 : 05	- : - -	SP *	
- - / - -	- -	- : - -	- : - -	- -	- -
- - / - -	- -	- : - -	- : - -	- -	- -

					1 / 2
DATE	PR	START	STOP		
21 / 06	02	12 : 00	13 : 00	SP *	
9 / 07	D03	21 : 05	- : - -	LP *	
- - / - -	- -	- : - -	- : - -	- -	- -
- - / - -	- -	- : - -	- : - -	- -	- -

					1 / 2
DATE	PR	START	STOP		
21 / 06	02	12 : 00	13 : 00	SP *	
9 / 07	D03	21 : 05	22 : 30	LP -	
- - / - -	- -	- : - -	- : - -	- -	- -
- - / - -	- -	- : - -	- : - -	- -	- -

NOTES:

- VPS/PDC is a signal broadcast by some TV stations which adjusts the start and stop time of your VCR recording. This ensures that if there is a change in broadcast time for your programme the VCR will still record the whole programme. It is essential that the start time as it appears in the TV listing is used to program the VCR, as this information is used to identify the VPS/PDC signal corresponding to your programme.
- If  flashes a video tape has not been inserted into the VCR.
- If the video tape is ejected when the VCR tries to record the record protection tab has been removed.
- During recording, press **STOP** () to cancel the recording. If there are further recordings to be made, the VCR will return to **TIMER STANDBY**.

BASIC OPERATION


HOW TO SET A DELAYED RECORDING

CHECKING, CHANGING AND CANCELLING A RECORDING

CHECKING A RECORDING


1. If in **TIMER STANDBY** mode, press **TIMER ON/OFF** to exit.
2. Press **STOP** to switch on the VCR.
3. Press **MENU**.
4. Press [▲ / ▼] to select **TIMER**. Press **SET** to confirm.
 - All the delayed recordings in the VCRs memory will be shown.
 - You can check the settings and change or cancel them.

MENU SCREEN

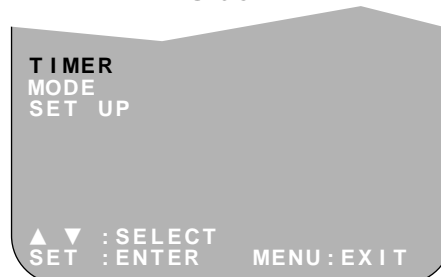


CHANGING A RECORDING

1. Follow steps 1 to 4 of **CHECKING A RECORDING**.
2. If you wish to change a delayed recording, press [▲ / ▼] to highlight the recording, then press **SET**.
3. Press [◀ / ▶] to highlight the setting to be changed and correct it by using the [▲ / ▼] or the **NUMBER BUTTONS**.
4. When all corrections are complete press **SET**, then press **MENU**.

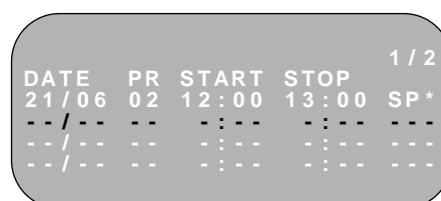

CANCELLING A RECORDING

1. Follow steps 1 to 4 of **CHECKING A RECORDING**.
2. If you wish to cancel a delayed recording, press [▲ / ▼] to highlight the recording to be cancelled, then press **CLEAR**.
3. Press **MENU**.

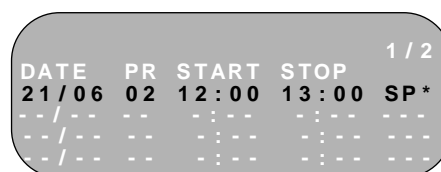

NOTE:

- If there are some programmes to be recorded, do not forget to press **TIMER ON/OFF** button to return the VCR to **TIMER STAND-BY** mode.

ADVANCED OPERATION

AUDIO AND YOUR VCR (HiFi VCR'S ONLY)

HI-FI STEREO SOUND

Stereo sound is possible from this VCR if you have a **stereo TV connected to the VCR with a scart lead**, or audio equipment connected with audio phono leads. The VCR is normally set so that stereo sound is possible. The sound output from the VCR is controlled by the **AUDIO OUT** button on the remote control. If you wish to change the sound output you can use the **AUDIO OUT** button as follows:

- Press **AUDIO OUT** once. The **LEFT** audio channel will be sent to **BOTH** speakers. **L** will appear on the VCR display.
- Press **AUDIO OUT** twice. The **RIGHT** audio channel will be sent to **BOTH** speakers. **R** will appear on the VCR display.
- Press **AUDIO OUT** three times. The **MONO** track will be sent to **BOTH** speakers. **L** and **R** will disappear from the VCR display.
- Pressing **AUDIO OUT** a fourth time, normal Hi-Fi stereo sound will be heard. **L** and **R** will appear on the VCR display.


NICAM Hi-Fi STEREO SOUND

Your VCR can receive and record programmes broadcast in NICAM or IGR sound (the factory pre-set condition for NICAM is **AUTO**). NICAM or IGR sound may not be stereo, this depends on the programme being received.

Audio is automatically recorded in two different ways:

- Hi-Fi: Using specialised rotary heads, two audio signals are recorded on to the tape. These will be stereo, mono or bilingual depending on the sound being received.
- Normal: A mono recording is also made on the conventional analogue audio track.

1. Press **MENU** to display the main menu on the screen.
2. Press [**▲** / **▼**] to select **MODE**.
3. Press **SET**. **NICAM** will be selected.
4. Press [**◀** / **▶**] to select **OFF**.
5. Press **SET**, to return to the menu screen.
6. Press **MENU**, to exit to normal screen.

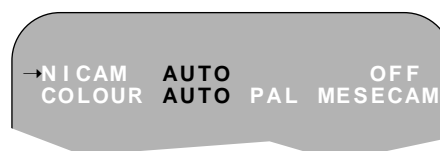

NOTES:


- If the tape being played back does not carry sound recorded on Hi-Fi tracks, **L** and **R** will not appear on the display.
- If the sound contains 'crackling' or 'popping' noises the sound quality may be improved by adjusting the tracking using **CHANNEL** **▼** / **▲**.
- If the poor quality is for a long period the VCR will automatically select the mono track and the sound will be in mono.
- Not all TV transmitters provide NICAM or IGR sound. In this case the VCR automatically switches to receive the mono signal.
- NICAM sound may not be stereo.

ADVANCED OPERATION

AUDIO AND YOUR VCR (HiFi VCR'S ONLY)

CONNECTING TO AUDIO EQUIPMENT

The diagram below shows how to connect your VCR to audio equipment. When connected in this way stereo sound is possible from the speakers.

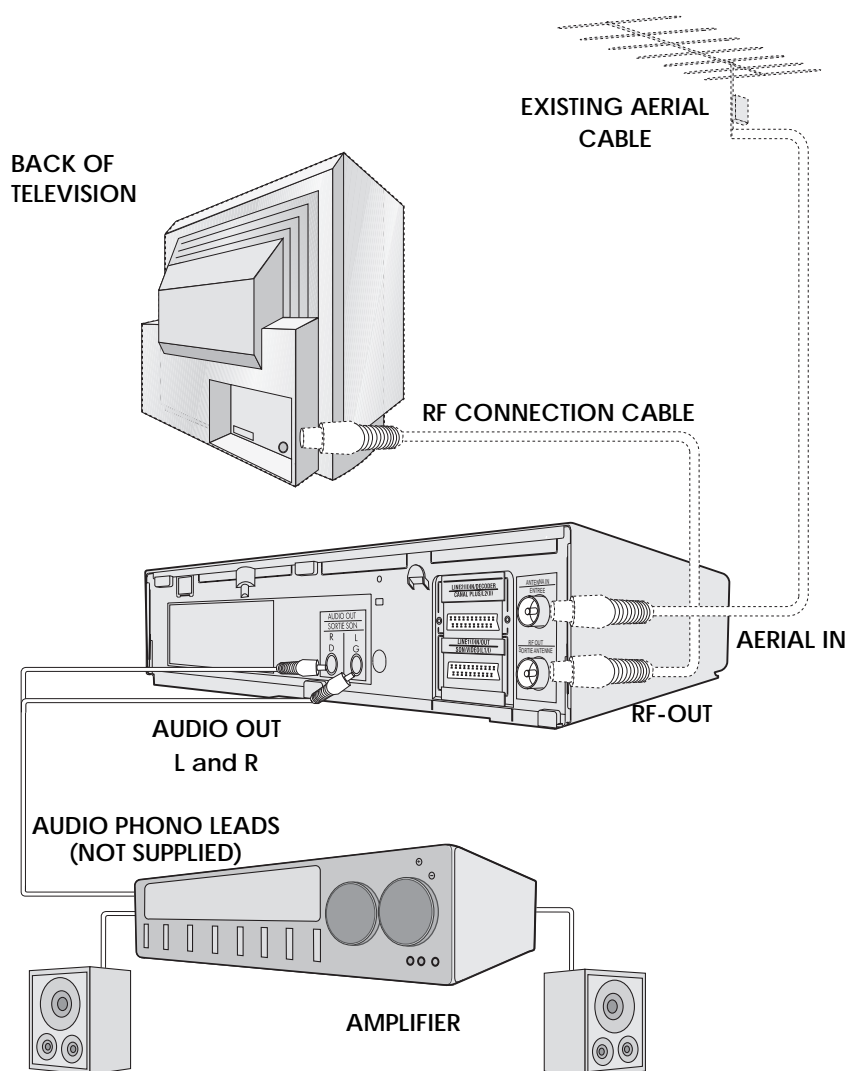

ADVANCED OPERATION

PLAYBACK OF A VIDEO TAPE

CHECKING THE AMOUNT OF TAPE REMAINING

When you load a video tape into the VCR it can calculate approximately the amount of video tape remaining in hours and minutes. This is useful in determining whether or not there is sufficient tape left to make a recording.

When a video tape is playing, the amount of tape remaining is calculated for you automatically.

To display the amount of video tape remaining:

1. Load the video tape into the VCR
2. Press **DISPLAY** on the remote control as many times as necessary until "R" appears on the VCR display. The tape will wind forward and then return to its original position. The tape remaining will be shown on the VCR display in hours and minutes.

For example, if 1 hour 23 minutes is left on the tape:



NOTES:

- Do not interrupt the tape remaining calculation.
- If less than 5 minutes of tape remains the display will flash.


PLAYING BACK A VIDEO TAPE REPEATEDLY

You can set your VCR to automatically rewind at the end of playing a video tape and replay the entire tape again. REPEAT will appear on the on-screen display when selected.

To use this feature:

1. Press **MENU** to display the main menu on the screen.
2. Press [**▲** / **▼**] to select **MODE**.
3. Press **SET**.
4. Press [**▲** / **▼**] to select **REPEAT**.
5. Press [**◀** / **▶**] to select **ON**.
6. Press **SET**.
7. Press **MENU** to return to normal screen.

MODE MENU SCREEN

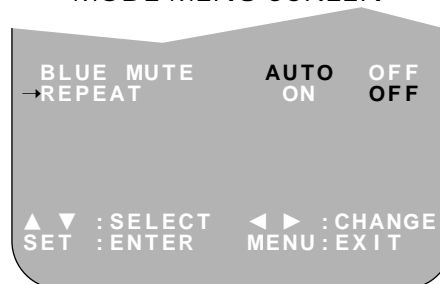



ADVANCED OPERATION

 
 
PLAYBACK OF A VIDEO TAPE

PLAYING BACK AN NTSC TAPE

NTSC (National Television Standards Committee) is a different TV standard to PAL and is used in some Non-European Countries. Your VCR can playback pre-recorded NTSC tapes onto a PAL system TV, but cannot record an NTSC signal onto a video tape.

Note that..

- You cannot record NTSC signals or dub NTSC tapes onto other VCRs from this VCR.
- You cannot use Slow speed, Still frame, Double Speed, Frame Advance or Tape Remaining with a pre-recorded NTSC tape.
- On some televisions, the picture may appear in black and white or there may be no picture. This does not indicate a fault with your VCR.
- On some televisions, the picture may shrink vertically causing black bands to appear at the top and bottom of your screen.
- On some televisions, the played-back picture may roll vertically, this does not indicate a fault with your VCR.



ADVANCED OPERATION

DIGITAL DISPLAY

TIME OF DAY

Shows current time of day, if the clock is set.
Press **DISPLAY** until the time of day appears. For example, 21:20 appears:



OPERATION MODE

Shows status of tape. Press **DISPLAY** until the display appears, for example:



TAPE COUNTER AND ZERO BACK

Tape counter measures the current position of the video tape in real time. **ZERO BACK** uses the tape counter to determine a specific point on a tape you may wish to return to.

1. Press **DISPLAY** until tape counter appears, for example:



2. To identify the current position on a video tape press **CLEAR** and the tape counter will appear:



When you wish to return to this position on the video tape, press **ZERO BACK**. The tape will rewind/advance to this point.

NOTE:

- The tape counter will only operate on recorded sections of tape.

ADVANCED OPERATION

BLUE MUTE

The TV screen will be blue if a TV channel with no signal is selected, an unrecorded section of tape is played or the quality of the recording on the tape is poor. Select OFF to disable this feature.

1. Press **MENU** to display the main menu on the screen.
2. Press [**▲** / **▼**] to select **MODE**.
3. Press **SET**.
4. Press [**▲** / **▼**] to select **BLUE MUTE**.
5. Press [**◀** / **▶**] to select **OFF**.
6. Press **SET** and then **MENU** to return to the normal screen.

MODE MENU SCREEN

NICAM	AUTO	OFF
COLOUR	AUTO	PAL MESECAM
BLUE MUTE	AUTO	OFF

COLOUR

If the VCR is playing poor quality recording, the picture may turn black and white. Selecting PAL/MESECAM may improve this (depending on the recording), although coloured speckles may appear on black and white recordings.

1. Follow steps 1 to 3 from **BLUE MUTE**.
2. Press [**▲** / **▼**] to select **COLOUR**.
3. Press [**◀** / **▶**] to select **AUTO/PAL** or **MESECAM**.
4. Press **SET** and then **MENU** to return to the normal screen.

ADVANCED OPERATION

SEARCHING THE VIDEO TAPE

SKIP SEARCHING THE VIDEO TAPE

You can search the tape in 30 second time intervals. To do this follow the procedure below:

1. Press **PLAY/X2** (▶) to start the video tape playing.
2. Press **SKIP SEARCH** on the remote control.
The number of times you press **SKIP SEARCH** determines the forward search time.

1 press	= 30 seconds.
2 presses	= 1 minute.
3 presses	= 1 minute 30 seconds.
4 presses	= 2 minutes.
- After searching, normal playback will resume automatically


DIGITAL PROGRAMME SEARCH SYSTEM (DPSS)

Your VCR records a marker signal on the tape at the start of each recording. These signals can be used later to locate the starting point of a recording.

Press **DPSS** ◀ / ▶ to locate a previous programme or the next programme.

For example,

1. Load the video tape into the VCR.
2. Press **DPSS** ▶ three times. A 3 will appear on the on-screen display, and the VCR will fast forward to locate the third recording after the current one.
3. Press **DPSS** ◀ once. A -1 will appear on the on-screen display and the VCR will rewind to locate the beginning of the current recording.

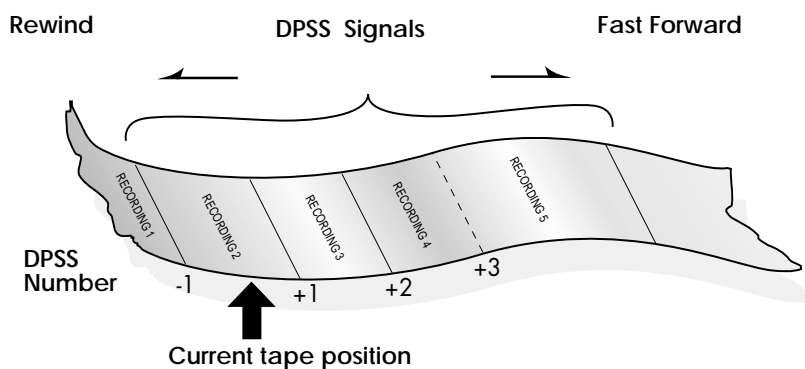

4. To cancel the search before it has finished, press **STOP** (■) or **PLAY/X2** (▶).

NOTES:

- Recordings must be longer than 3 minutes..
- The starting point of playback may vary.
- This feature will only work with video tapes recorded on a VCR with the DPSS feature.


ADVANCED OPERATION

RECORDING FROM OTHER EQUIPMENT


You can record video and audio signals from various sources, for example a camcorder, onto a video tape using your VCR.

For example, recording from a camcorder connected to LINE 2 IN/DECODER on your VCR:

Optional Scart connection (not supplied)

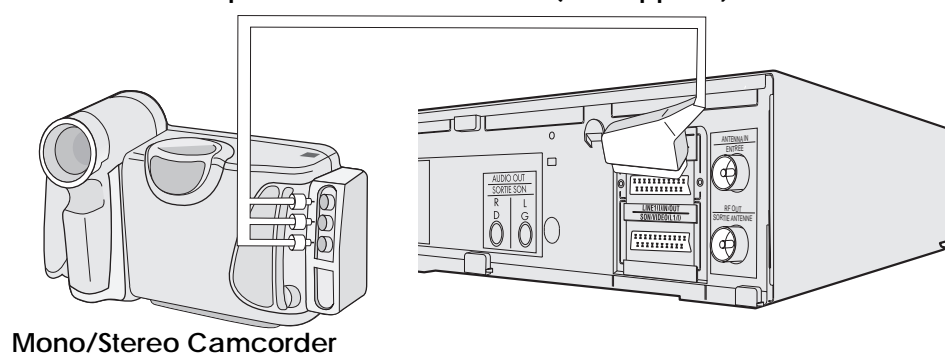


1. Load tape into the VCR.
2. Press **INPUT SELECT** on the remote control until the VCR display shows **L2**.
3. If you wish to record from a source connected to **LINE 1 IN/OUT**, select **L1**.
4. If you wish to record from a source connected with audio phono leads to the sockets on the front of the VCR (if fitted), select **L3**.

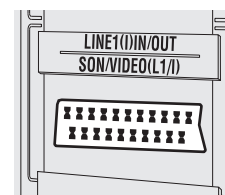

NOTE:

 - There are many different ways of connecting external equipment to your VCR. Please refer to your equipment operation manuals for further information.



ADVANCED OPERATION

DECODER SWITCHING OPERATION

 
If you connect a separate decoder to the VCR connected to L2 as previously shown, you will need to set the decoder function to ON in order to record the descrambled signal and/or watch it on your TV. Now, when the VCR receives a scrambled signal it is output via LINE 2 terminal to the decoder. The decoder then outputs the descrambled signal back to LINE 2 terminal and the signal can be recorded. The VCR outputs the descrambled signal to your TV through the LINE1 terminal and you can watch the descrambled picture.

When making recordings using a separate decoder connected as shown remember to leave the decoder function ON.

If you connect a decoder unit to the VCR, the decoder unit provides a switching signal which will automatically allow your TV to display the descrambled signal routed through the VCR. To use this feature make sure that the VCR is connected to both TV and decoder unit by SCART leads. Then:

- Press STANDBY to place the VCR in Stand-by mode, OR
- Press [TV/VCR] on the remote control to place the VCR in 'VCR mode'. 'VCR' will appear on the display.

If you switch the decoder function ON when connected to a decoder unit as shown you will NOT be able to watch the descrambled picture in TV mode or in VCR mode.



SPECIAL FEATURES ON YOUR VCR

LOW POWER FEATURE

To meet new power regulations your VCR can be placed in LOW POWER mode. In LOW POWER mode the VCR power consumption is reduced to below 2 Watt.

LOW POWER MODE

1. Press STAND BY (⏻) to place the VCR in STANDBY mode.
2. Press STAND BY (⏻) again to place the VCR in LOW POWER mode. The VCR digital display will appear blank.

The VCR power consumption will now be below 2 Watt.

DISENGAGING LOW POWER MODE

Either Press STAND BY (⏻) to return the VCR to STANDBY mode.

Or Press STOP (■) to use the VCR.

NOTES:



- With poor signal conditions an increase in noise may be observed on the screen in LOW POWER mode.
- When entering STANDBY, noise may be observed.
- If a signal is input from an AV source, the VCR may not go into true LOW POWER mode.
- When disengaging low power mode from the VCR press the Standby button.

CHILD LOCK

You can lock your VCR with this feature. It will work even when the VCR is in standby, preventing children from operating the VCR.

TO ENGAGE CHILD LOCK

Press and hold  on the remote control for about 2 seconds.

 flashes and then  remains lit on the VCR display confirming that CHILD LOCK has been activated.


Regardless of what other operating buttons are touched, the VCR will continue to operate in its present mode. If CHILD LOCK is activated during playback, once the tape reaches its end, the VCR will automatically rewind the tape, eject it, and turn the power off.

TO DISENGAGE CHILD LOCK

Press and hold  for about 2 seconds.

 starts flashing and then disappears. CHILD LOCK is disengaged.

NOTES:

- If you attempt to change modes by pressing another button while CHILD LOCK is on, the  indicator will flash on the VCR display.
- If power is interrupted for more than 1 hour (due to power failure etc), CHILD LOCK may disengage.

CUSTOMISED INSTALLATION

MANUALLY TUNING A CHANNEL

It should not be necessary to tune in a broadcast channel manually except in unusual circumstances such as poor signal.

To manually tune in a channel follow the procedure below.

1. Press **MENU**.
2. Press [**▲** / **▼**] to select **SET UP**. Press **SET** to confirm.
3. **CHANNEL PRESET** will be highlighted. Press **SET**.
4. Press [**▲** / **▼**] to select **CHANNEL**.
5. Press [**1/11**] to select **CH** or **CC**. This will determine whether off air (**CH**) or cable (**CC**) is tuned first. Note that both off air and cable will be tuned regardless of the setting.
6. Press [**◀** / **▶**] to start tuning in either direction. Tuning will stop when a channel is received. If it is not the desired channel, press [**◀** / **▶**] to continue tuning.
7. Press [**▲** / **▼**] to select **FINE TUNING**. Press and hold [**◀** / **▶**] until the sharpest colour picture is obtained.

CHANNEL PRESET
CHANNEL SORT
CLOCK
LANGUAGE

PRESET
CHANNEL
FINE TUNING
DECODER
SKIP

1
CH 21
ON OFF
ON OFF

IMPORTANT NOTE:

8. If you connect an independent decoder, you must press [**▲** / **▼**] to select **DECODER**, then select [**◀** / **▶**] to turn the decoder function **ON**.
9. Press [**▲** / **▼**] to select **SKIP**.
The **SKIP** function determines whether the channel can be selected when using the **CHANNEL** **▲** / **▼** instead of the **NUMBER BUTTONS**.
10. Press [**◀** / **▶**] to select **ON** or **OFF** for this option.
11. Press **SET** to confirm.
12. Press **MENU** to leave this function.

*CUSTOMISED INSTALLATION***BROADCAST AND CATV CHANNELS**

	Station Signals	Real Channel Numbers		Station Signals	Real Channel Numbers
V H F	2/A ●	CH:02	C A T V	S01/S21 ▲	CH:75
	3/B ●	CH:03		S02/S22 ▲	CH:76
	4	CH:04		C ●/S03/	CH:77
	5/D ●	CH:05		S23 ▲	CH:78
	6/E ●	CH:06		S24 ▲	CH:79
	7/F ●	CH:07		S25 ▲	CH:80
	8	CH:08		S1	CH:85
	9/G ●	CH:09		S5	
	10/H ●	CH:10		M1/S1	CC:01
	11/H1 ●	CH:11		M2/S2	CC:02
	12/H2 ●	CH:12		:	:
	S11	CH:13		M10/S10	CC:10
U H F	21	CH:21		U1/S11	CC:11
	22	CH:22		:	:
	:	:		U10/S20	CC:20
	:	:		S21	CC:21
	:	:		:	:
	68	CH:68		S40	CC:40
	69	CH:69		S41	CC:41

● Available in Italy ▲ Available in Switzerland

NOTE:

- The VCR has 84 programmable channel positions each of which can be set to any of the broadcast and CATV channels shown in the table.

CUSTOMISED INSTALLATION

MANUALLY SORTING CHANNELS

SORTING THE CHANNELS INTO YOUR PREFERRED ORDER

When your VCR tunes in broadcast channels automatically it sorts them into a standard order using teletext information. You can change the order of the channels with the following procedure.

1. Press MENU.
2. Press [▲ / ▼] to select SET UP. Press SET to confirm.
3. Press [▲ / ▼] to select CHANNEL SORT. Press SET to confirm.
4. The MOVE position will be highlighted. Press SET to confirm.
5. Press [▲ / ▼ / ◀ / ▶] to highlight the channel to be moved. Press SET to confirm.
6. Press [▲ / ▼ / ◀ / ▶] to highlight the new position for the channel. Press SET to confirm.
7. If any more channels are to be moved, repeat procedure from step 5.
8. When all the channels are in your preferred order, press MENU to leave the MENU function.

2. MENU SCREEN

MODE
SET UP

5.

	MOVE	1 / 5
1 ARD1	7	13
2 ZDF	8	14
3 RTL1	9	15
4 RTL2	10	16
5 NDR3	11	17
6	12	18

6.

	MOVE	1 / 5
1 NDR3	7	13
2 ARD1	8	14
3 ZDF	9	15
4 RTL1	10	16
5 RTL2	11	17
6	12	18

CUSTOMISED INSTALLATION

MANUALLY SORTING CHANNELS

DELETING CHANNELS

If there is a channel you wish to delete from the VCR memory you can follow the procedure below.

1. Press MENU.
2. Press [▲ / ▼] to select SET UP. Press SET to confirm.
3. Press [▲ / ▼] to select CHANNEL SORT. Press SET to confirm.
4. Press [▲ / ▼] to select CANCEL. Press SET to confirm.
5. Press [▲ / ▼ / ◀ / ▶] to highlight the channel to be cancelled.
6. Press SET twice to cancel the channel.
7. When all the channels you wish have been cancelled, press MENU.

2. MENU SCREEN

TIMER
MODE
SET UP

5.

CANCEL		1 / 5
1ARD1	7	13
2ZDF	8	14
3 NDR3	9	15
4RTL1	10	16
5RTL2	11	17
6CH5	12	18

6.

CANCEL		1 / 5
1ARD1	7	13
2ZDF	8	14
3RTL1	9	15
4RTL2	10	16
5CH5	11	17
6CH6	12	18

*CUSTOMISED INSTALLATION***MANUALLY SORTING CHANNELS****RE-NAMING CHANNELS**

When your VCR tunes in broadcast channels automatically, it names them using teletext information. You can change the name of a channel with the following procedure.

1. Press MENU.
2. Press [▲ / ▼] to select SET UP.
Press SET to confirm.
3. Press [▲ / ▼] to select CHANNEL SORT.
Press SET to confirm.
4. Press [▲ / ▼] to highlight NAME.
Press SET to confirm.
5. Press [▲ / ▼ / ◀ / ▶] to highlight the channel to be named.
Press SET to confirm.
6. Press [◀ / ▶ / ▲ / ▼] to rename the channel.
Press SET to confirm.
7. If any more channels are to be renamed, repeat procedure from step 5.
8. When all the channels are named correctly, press MENU to leave the MENU function.

2. MENU SCREEN

MODE
SET UP

5.

	NAME	1 / 5
1 ARD1	7	
2 ZDF	8	
3 RTL1	9	
4 RTL2	10	
5 CH5	11	
6 CH6	12	

6.

	NAME	1 / 5
1 ARD1	7	
2 ZDF	8	
3 RTL1	9	
4 CH4	10	
5 CH5	11	
6 CH6	12	

CUSTOMISED INSTALLATION

CHANGING THE ON-SCREEN DISPLAY LANGUAGE

Changing the language used by the on-screen display will not change the operation of the VCR or make it suitable for any other broadcast standard.

1. Press **MENU**.
2. Press [▲ / ▼] to select **SET UP**. If the display is not in a language you can understand, this is the fourth option from the top. Press **SET** to confirm..
3. Press [▲ / ▼] to select **LANGUAGE** (the last option).
4. Then press **SET**.
5. Press [▲ / ▼ / ◀ / ▶] to select your language. Then press **SET** to confirm.



MANUALLY SETTING THE CLOCK

The clock will normally be set using teletext information when your VCR automatically tunes in the broadcast channels. If for any reason teletext signals are not present your VCR will not be able to set the clock. This procedure will allow you to set the clock manually.

1. Press **MENU**. Press [▲ / ▼] to select **SET UP**. Press **SET** to confirm.
2. Press [▲ / ▼] to select **CLOCK**. Press **SET** to confirm.
3. Press [▲ / ▼] to select either 12 or 24 hour clock.
4. Press [◀ / ▶] to select **TIME**. Enter the time using the **NUMBER BUTTONS** or [▲ / ▼]. If the minutes are less than 10, enter the leading 0. If using the 12 hour clock enter AM or PM by pressing (1/12) on the remote control.
5. Press [◀ / ▶] to select **DATE**. Enter the date using the **NUMBER BUTTONS** or [▲ / ▼]. For example, for 1st April enter 01 04.
6. Press [◀ / ▶] to select **YEAR**. Enter the last two digits of the year using the **NUMBER BUTTONS** or [▲ / ▼]. For example, for 1999 enter 99. For the year 2000 enter 00.
7. Select * for **AUTO CLOCK** on/off (* is ON, - is OFF). Then press **SET** to confirm.




NOTE:

- If **AUTO CLOCK** is set to **OFF** (- is OFF) then you will need to update the clock for daylight saving.

MORE INFORMATION ABOUT YOUR VCR

VCR DIGITAL DISPLAY

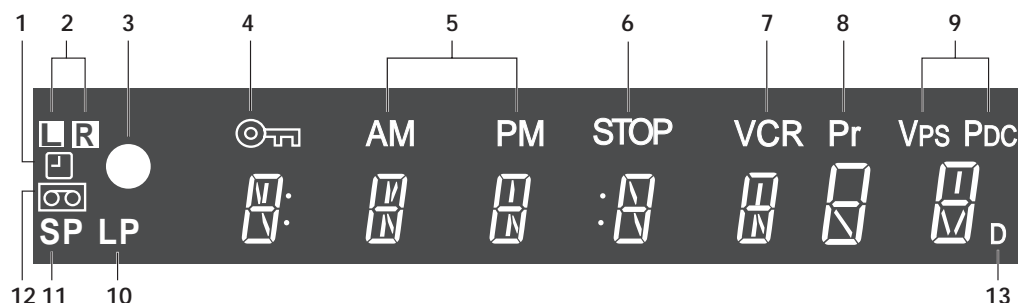

1. TIMER indicator.
2. AUDIO OUTPUT indicators.
3. RECORDING indicator.
4. CHILD LOCK indicator.
5. AM/PM indicators.
6. STOP indicator.
7. VCR mode indicator.
8. PRESET CHANNEL indicator.
9. VIDEO PROGRAMMING SYSTEM/PROGRAMME DELIVERY CONTROL indicator.
10. LONG PLAY indicator.
11. STANDARD PLAY indicator.
12. VIDEO TAPE indicator.
13. DECODER indicator.

NOTE:

- Some models do not have all the features shown, therefore, they will not appear on the display.

SELECTING THE OUTPUT FROM THE VCR

If your VCR is connected to your TV with a scart lead, when you start to play a video tape the VCR will automatically switch its output so that playback picture is shown on the TV.

In this case 'VCR' will appear on the VCR display.

You can manually override this by pressing [TV/VCR] on the remote control. Now the TV broadcast channel will be seen on the TV screen and 'VCR' will disappear from the VCR display.


- Pressing [TV/VCR] again will return the TV picture to the playback picture.

MORE INFORMATION ABOUT YOUR VCR

ON-SCREEN DISPLAY

All the information you need on the VCR status will be summarised on the on-screen display. If you are recording, playing back a tape or watching a broadcast on the video channel you can call up three standard on-screen displays. The display can be selected by pressing the MODE OSD button on the remote control, 1,2,3 or 4 times.

- 1. AUTO**, the current mode and channel number will be displayed for 3 seconds when an operation or number button is pressed.
- 2. FULL.**, all the active features will also be shown on screen.

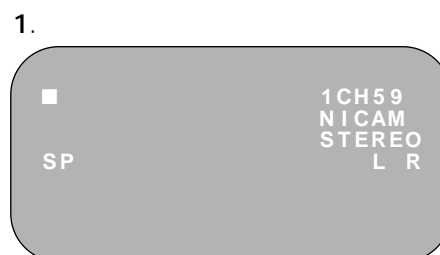

These
depend on
model
features

Programme number and channel

Tape Status

NICAM signal

Audio output mode


Tape speed

Tape remaining

Time

Date

Tape counter

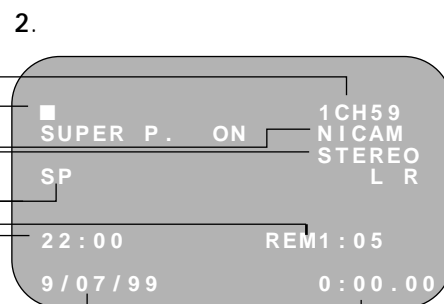


- 3. COUNTER**, this display will show the tape counter and amount of tape remaining.
- 4. DISPLAY OFF**, this will remove the display from the screen.



NOTES:

 - The default time and date will not be displayed if the clock has not been set.
- The VCR will return to display **1.** each time it is switched on.
- If you are recording from this VCR to another, make sure you remove the display from the screen otherwise it will be recorded.



MORE INFORMATION ABOUT YOUR VCR






SPECIFICATIONS

Format:	VHS PAL standard
Number of heads:	Four heads
Video signal system::	PAL/MESECAM colour or monochrome signal: 625 lines
Hi-Fi audio recording system:	Deep layer recording system conforming to stereo Hi-Fi VHS standard.
Maximum playing time:	480 min. with E-240 video cassette in Long Play (LP) mode
Tape width:	12.7 mm
Tape speed:	23.39 mm/s Standard Play (SP): 11.70 mm/s Long Play (LP)
Antenna:	75 Ω unbalanced
Reception channels:	VHF channel E2 - S41, UHF channel 21-69
RF output signal:	UHF channel 21-69
Power requirement:	AC 230V, 50 Hz
Power consumption:	16 W approx (Low power consumption \leq 2W)
Operating temperature:	5 °C to 40 °C
Storage temperature:	-20 °C to 55 °C
Video input:	1.0 Vp-p, 75 Ω
Video output:	1.0 Vp-p, 75 Ω
Audio input:	Line1&2: -3.8 dBs, 10 k Ω , Line 3: -5.0 dBs, 47 k Ω
Audio output:	Line1&2: -3.8 dBs, 1 k Ω Audio Out: -5.0 dBs, 1 k Ω
Hi-Fi audio:	Dynamic range:~ 90 dBs typ. (SP); Frequency response: 20 Hz - 20 kHz; Wow and flutter: < 0.005% Wrm (JIS A)
Dimensions:	360(W) x 289(D) x 93(H) mm
Weight:	3.2 kg (approx)
Supplied accessories:	75 Ω HF Connection cable, operation manual, remote control, AA/R6/UM3 battery (x2)

- Specifications are subject to change without notice as part of our policy of continuous improvement.
- No liability is accepted for any inaccuracies or omissions in this publication, although every possible care has been taken to make it complete and as accurate as possible.

TROUBLESHOOTING

TROUBLESHOOTING

PROBLEM	ANSWER
Display is not working.	<ul style="list-style-type: none"> • Make sure the VCR is not in LOW POWER mode. • Make sure the power cord is plugged in. • Make sure the wall socket has power (plug another appliance in).
VCR will not operate -  appears in VCR display.	<ul style="list-style-type: none"> • Press the TIMER ON/OFF button to disengage timer.
VCR will not respond to any commands.	<ul style="list-style-type: none"> • Check CHILD LOCK is not engaged. • Safety device operating: unplug VCR for 2 hours.
Tape cannot be loaded.	<ul style="list-style-type: none"> • Make sure there is no other tape in the VCR. • Make sure you are loading the tape correctly.
VCR cannot be operated by remote control.	<ul style="list-style-type: none"> • Remote control is too far away from the main unit. • Point the remote control at the VCR. • Batteries are flat - replace both. • Batteries have not been inserted correctly. • VCR is positioned in strong light.
No picture appears.	<ul style="list-style-type: none"> • Make sure TV is set to the video channel. • Check all connecting cables.
Rewind is not possible.	<ul style="list-style-type: none"> • Make sure tape is not at the start.
Picture does not change even though CHANNEL  /  buttons are pressed.	<ul style="list-style-type: none"> • Make sure VCR is not in timer or menu mode.
Desired channel position cannot be selected.	<ul style="list-style-type: none"> • The channel position has been set to be skipped. Cancel the skip mode for that channel.
No colour or poor TV picture on normal viewing.	<ul style="list-style-type: none"> • Make sure all the cables are connected properly. • Make sure VCR power cord is properly plugged in.
Playback picture is snowy.	<ul style="list-style-type: none"> • Adjust the tracking using CHANNEL  /  buttons. • Try another tape. • The video heads may have been contaminated - refer to a SHARP Service Facility.
Tape is automatically ejected when pressing REC (●) or TIMER ON/OFF buttons.	<ul style="list-style-type: none"> • The record-protection tab has been removed.
Playback/ recording does not playback in stereo.	<ul style="list-style-type: none"> • Ensure VCR is connected to a stereo TV and SCART lead. • Programme may not carry stereo.
SHOWVIEW does not record desired programme.	<ul style="list-style-type: none"> • Broadcast does not carry VPS/PDC signal which alters recording time. • Check VPS/PDC mode is switched to ON. • Ensure date and time are correctly set on the VCR.

SHARP

SHARP CORPORATION

SHARP ELECTRONICS (EUROPE) GmbH

Sonninstraße 3, 20097 Hamburg, Germany